


Lenovo Bracelet OTA Explain

1. Download and use APP


- (1) Sc an QR code or search “Smart Bracelet” from APP Store/Google Play. Then download and install the APP.



- (2) Open the APP and register

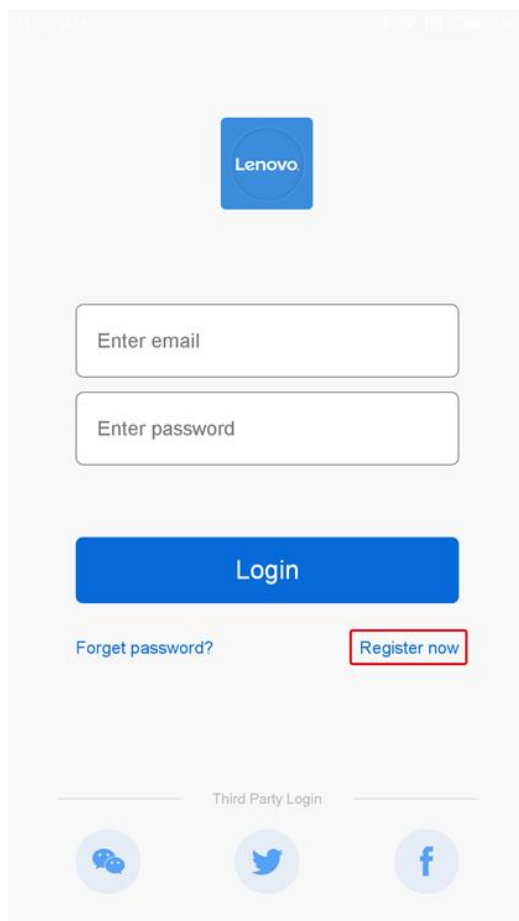


The screenshot shows the main interface of the Lenovo Smart Bracelet app. At the top is the Lenovo logo. Below it are two input fields: "Enter email" and "Enter password". A blue "Login" button is positioned below these fields. To the left of the button is a link "Forget password?" and to the right is a red-outlined button labeled "Register now". At the bottom, there is a section for "Third Party Login" with icons for WeChat, Twitter, and Facebook.

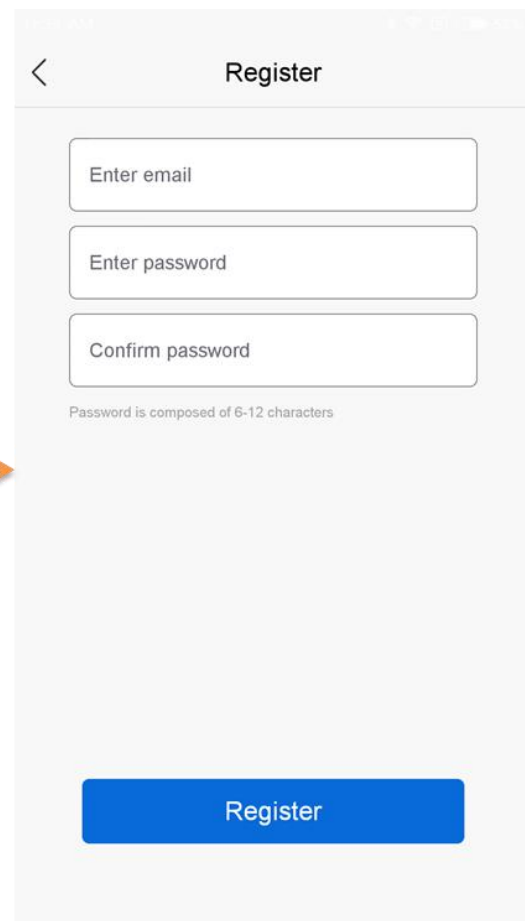

The screenshot shows the "Register" screen of the app. It features a back arrow at the top left and the title "Register". There are three input fields: "Enter email", "Enter password", and "Confirm password". Below the "Confirm password" field, a note states "Password is composed of 6-12 characters". A large blue "Register" button is at the bottom of the screen.


(3) Login and input your little information.

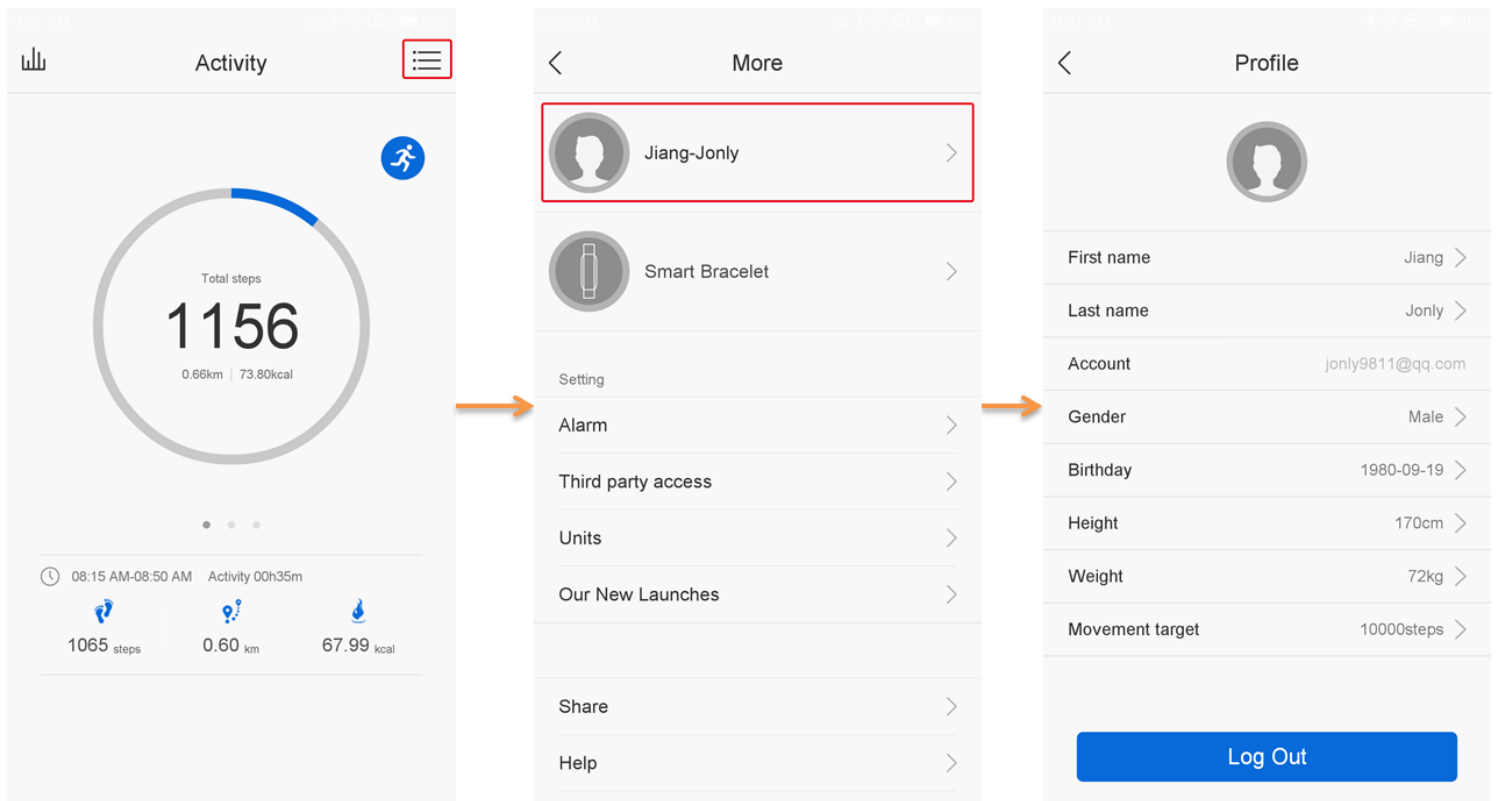


(4) APP binding bracelet.

2. APP binding bracelet

(1) Binding the bracelet with "Lenovo Smart Bracelet" APP, APP scan to the appropriate device, click on the device, and then touch the button on the bracelet to confirm the connection.

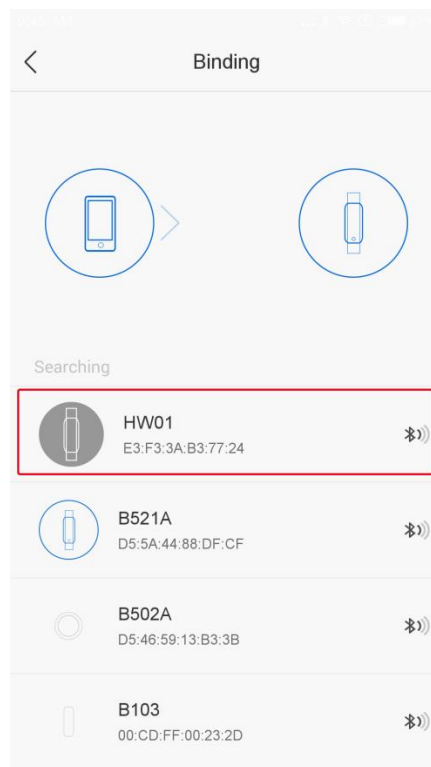

- (2) After binding the APP and bracelet, it will sync the data first. Then go to the “Firmware Update” function for check the bracelet firmware version.

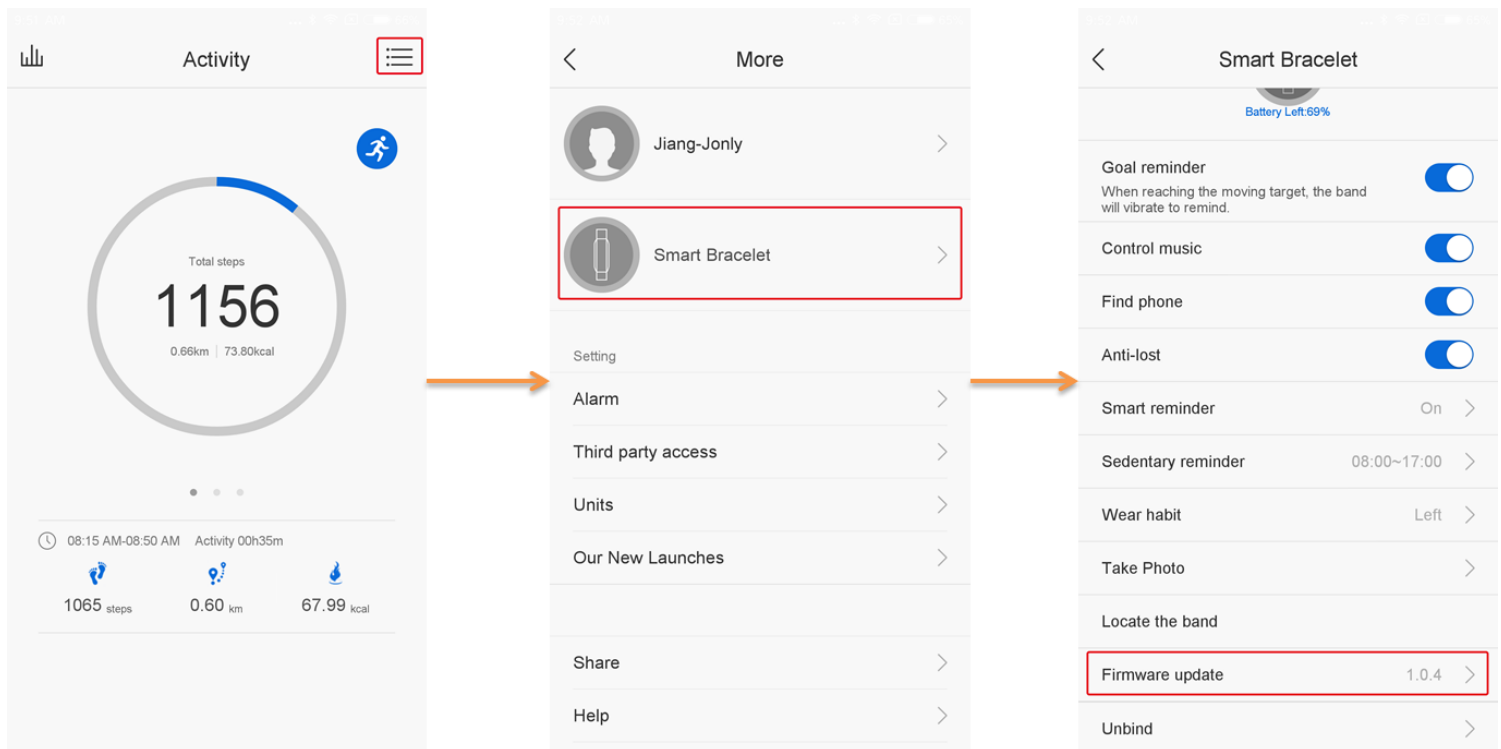


3. Firmware Update


There are two upgrade methods.

- (1) If the APP is used the first time, please exit and kill the APP process, and then re-open the APP, APP will reconnect bracelet automatically. After connected, the OTA prompt will be shown, user can choose “Done” for upgrading.

If there is no upgrade prompt, there may be several reasons: (1) network problems, (2) bracelet is the latest version.

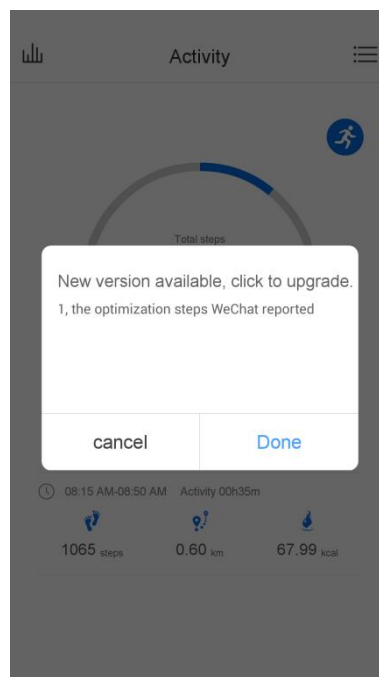

- (2) If the APP is not used the first time, you can go to the “Firmware Update” function for check the bracelet firmware version and upgrading.

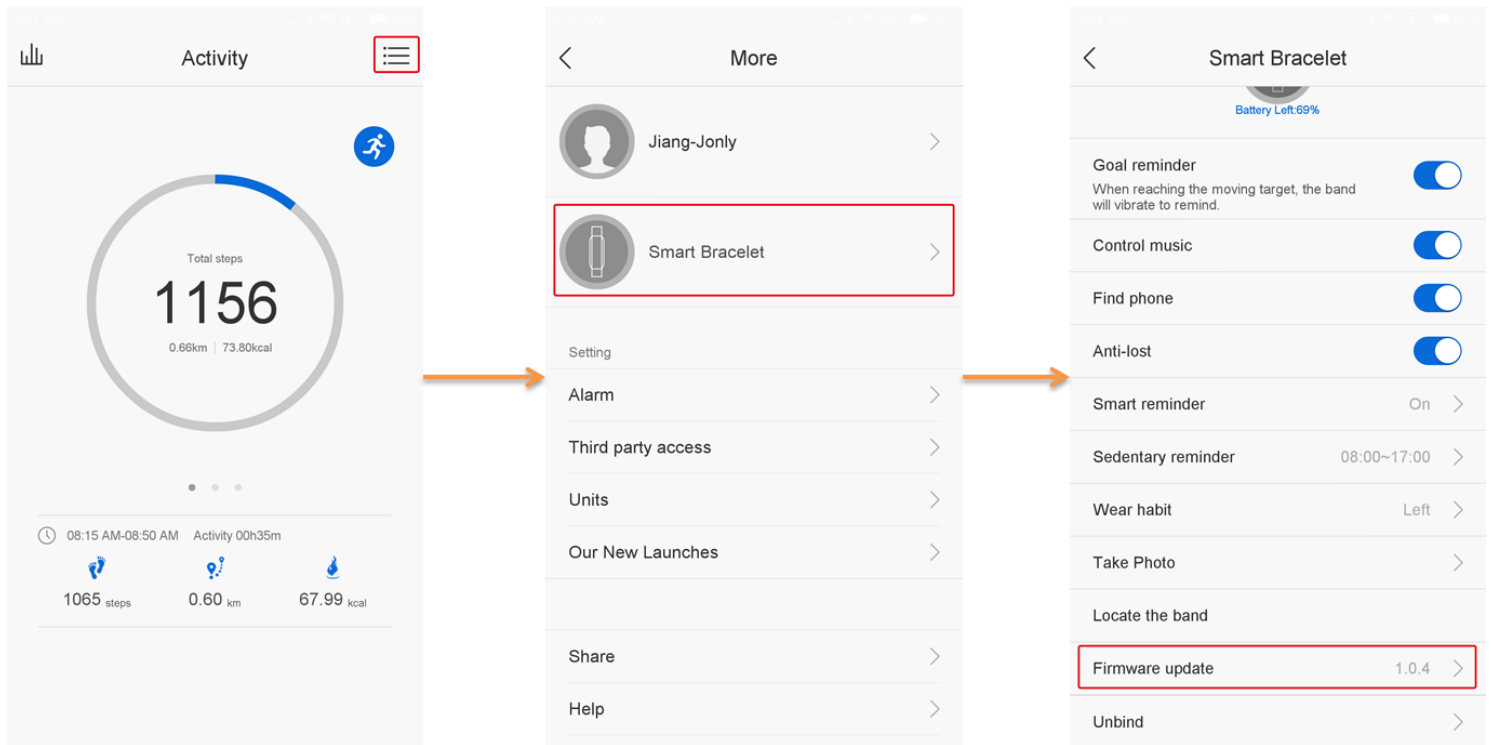


- (3) After the upgrade is finished, please sync the APP and bracelet again, otherwise the version shown in “Firmware Update” function maybe incorrect.

4. Upgrade failure measures

If the upgrade is failure, the bracelet will always stop in the upgrade interface, APP and bracelet can not be connected, bracelet can not restart, such as the following picture.



In this case, you need to unbind the APP and the bracelet.

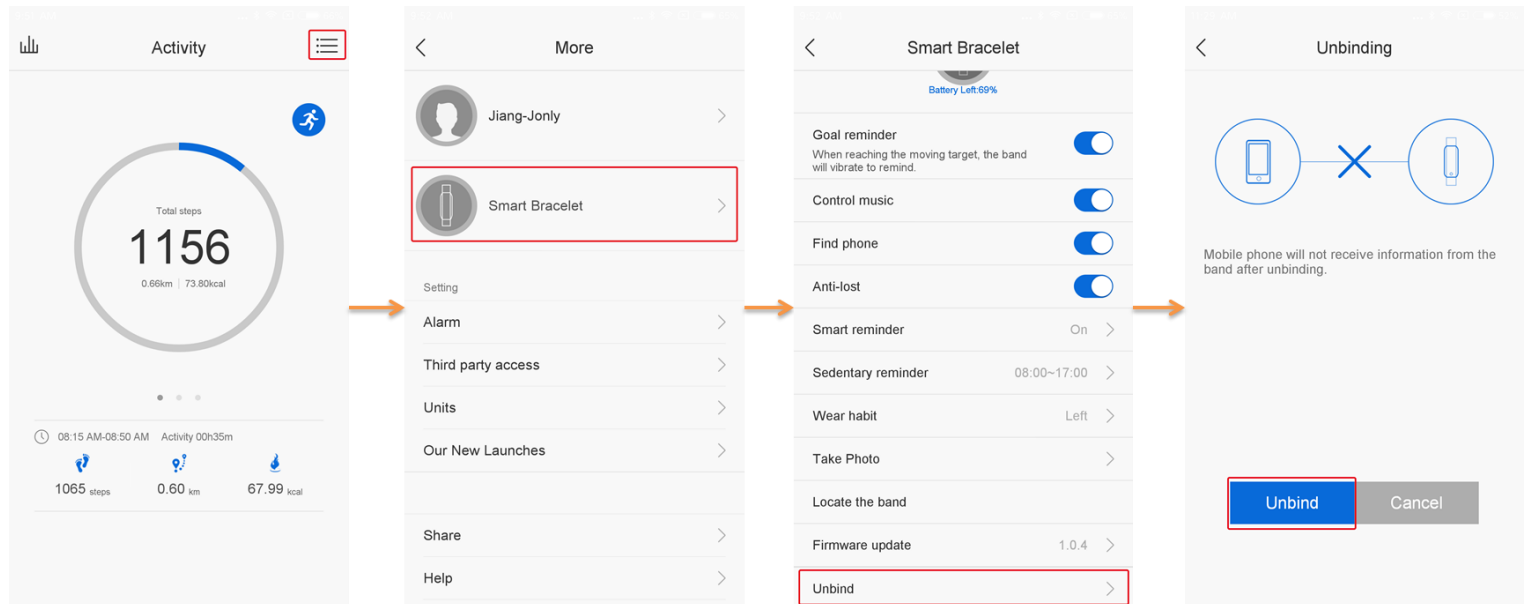

Then re-build them. When binding bracelet, APP will prompt the bracelet is in the upgrade mode and ask you to upgrade, please choose “yes” to confirm the upgrade, it will finish the upgrade again.

